


# STAND ADAPTER

## Items You Need

x1 PVC Adapter (Provided)  
x3 Rebar (3 Ft Long)  
Concrete Mix

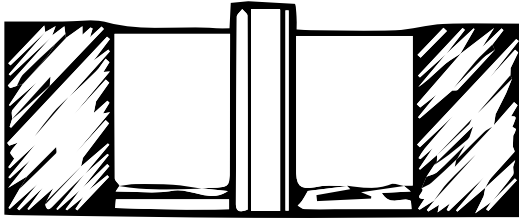


### STEP 1

Remove old flag pole  
and make sure the old  
PVC is empty


### STEP 2

Fill the old PVC sleeve 1/3 of the way  
with concrete mix. Insert the 3 Rebars  
evenly and proceed to next step.

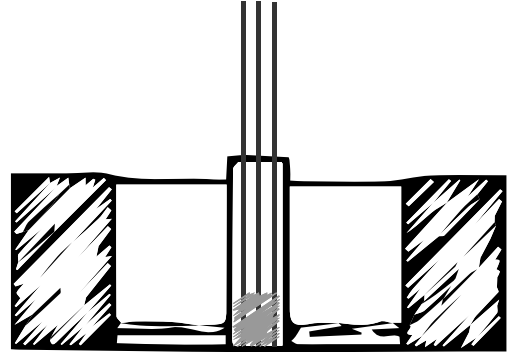

### STEP 3

Insert provided PVC Adapter over the Rebar.  
Once Inserted fill the rest of the PVC with  
concrete including the new Adapter.

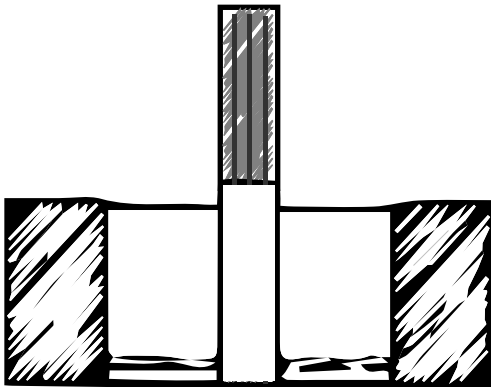

### FINAL STEP

Insert Roosevelt Flag Pole over the  
PVC Adapter

